


INSTRUCTION MANUAL

7KW EV CHARGER

WiFi CONFIGURATION GUIDE

SKU	DESCRIPTION
11868	7KW EV CHARGER SINGLE PHASE

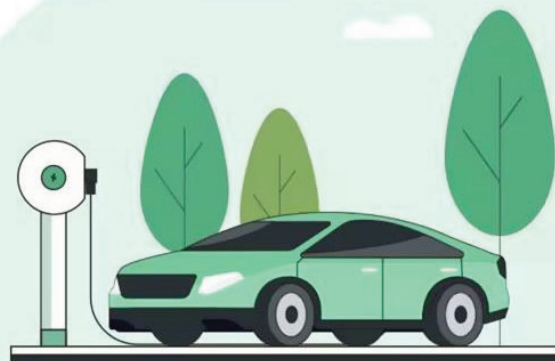


INTRODUCTION

Thank you for selecting and buying V-TAC product. V-TAC will serve you the best. Please read these instructions carefully before starting the installation and keep this manual handy for future reference. If you have any another query, please contact our dealer or local vendor from whom you have purchased the product. They are trained and ready to serve you at the best. The warranty does not apply to damage caused by incorrect installation or abnormal wear and tear. The company gives no warranty against damage to any surface due to incorrect removal and installation of the product. This product is warranted for manufacturing defects only.


I. Mira Wi-Fi Setting Guide

STEP 1: Check the firmware version

1. Scan the QR code on the nameplate with Sinexcel AC application to bind the charger.

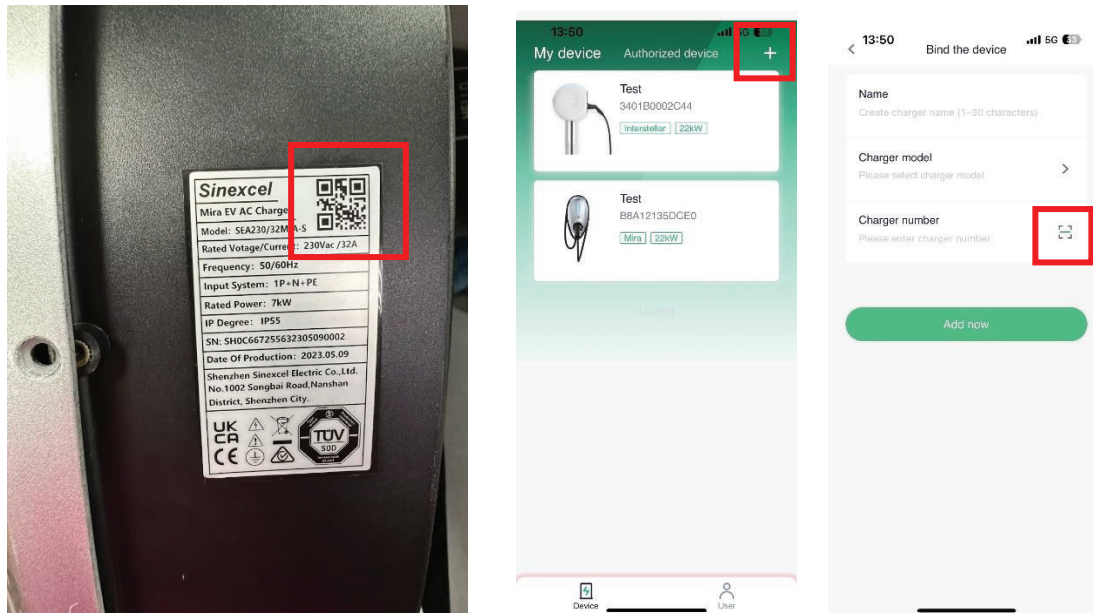


2. Check whether the firmware version is 000.071.042 or higher than that. (**Note: firmware version that is older than 042 does not support the Wi-Fi function.**)

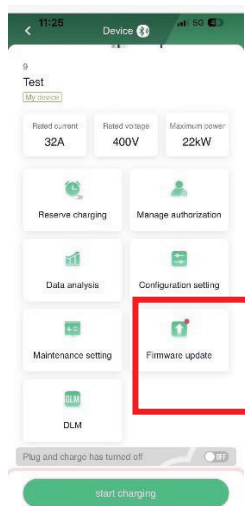


3. If the firmware version is 000.071.042 or newer version, please move to STEP 2;
If the firmware version is older than 000.071.042, (i.e. the number at the end is smaller than 42), we need to upgrade firmware version first.
4. Upgrade

1) through Sinexcel AC application

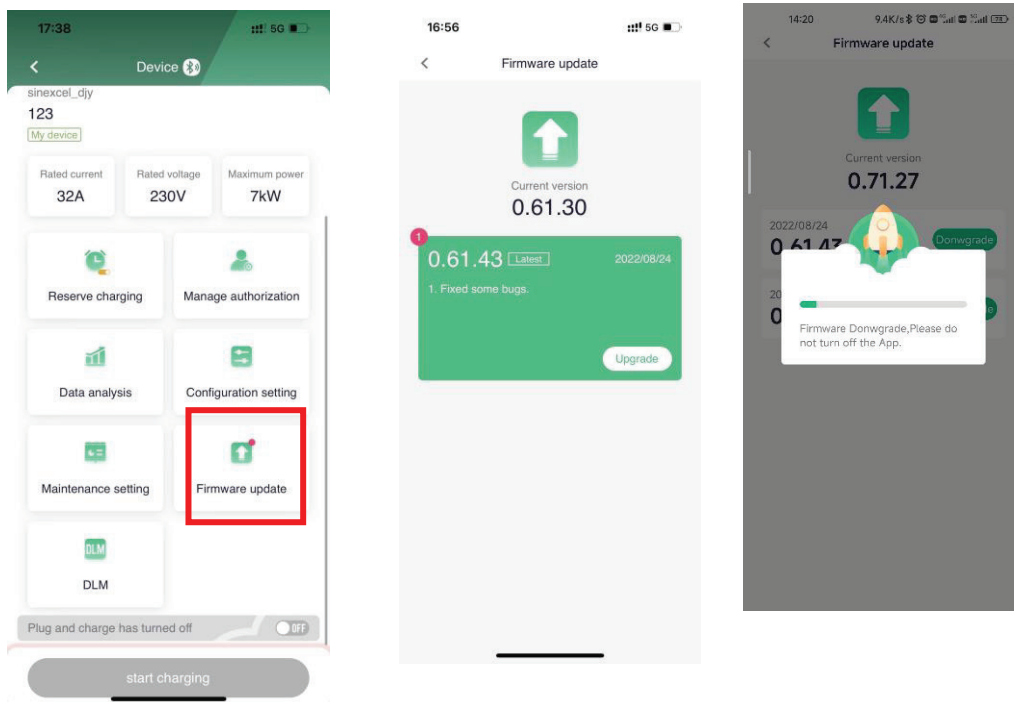


2) through USB disk

NOTE: USB2.0 drive with format FAT32. 4096 Bytes (Smaller than 16G) and USB name simplification (do not appear other than the letters of the alphabet A-Z, will not be recognized).

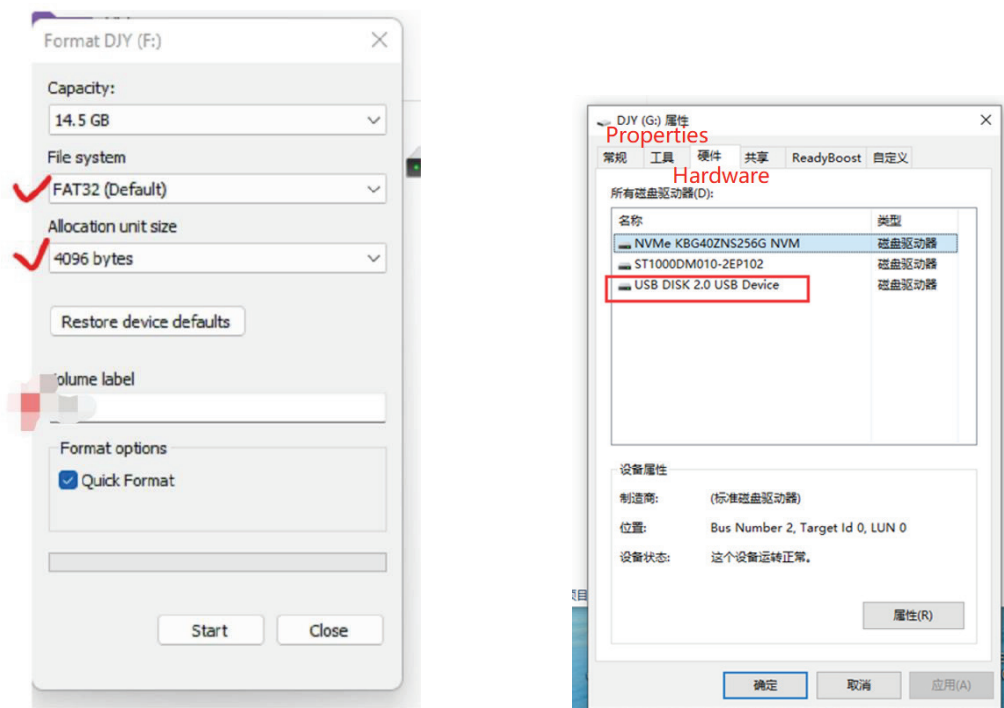


- Insert the USB drive with the latest firmware file (euac_GD.bin) at the root directory. Note the name of the firmware file should be exact: euac_GD.bin. Any difference would cause upgrade failure.
- Press the reset button near the USB port and wait for 1 minute till the LED light of Mira turns to constant blue. Plug out the USB disk. Upgrade finished.

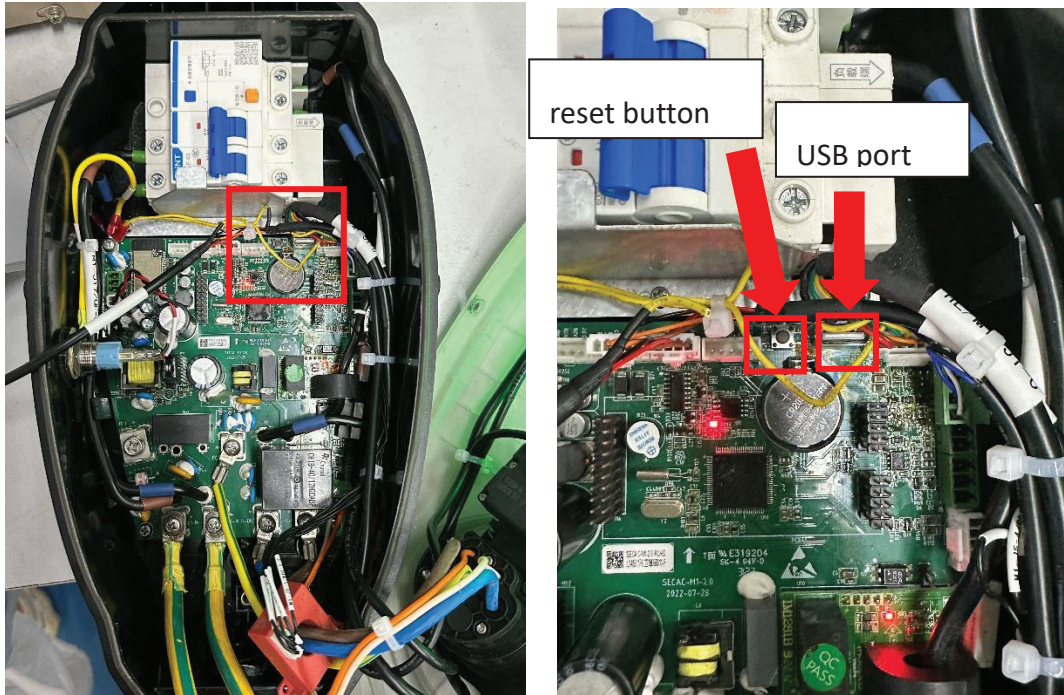


5. Check the firmware version through Sinexcel AC application after upgrade to see whether the upgrade is succeeded. If yes, move to STEP 2; if the upgrade failed, please check the USB disk's type, the firmware file's name, and whether the file is at the root directory of the USB disk.

STEP 2: Connect to Wi-Fi

1. Switch the communication method to Wi-Fi

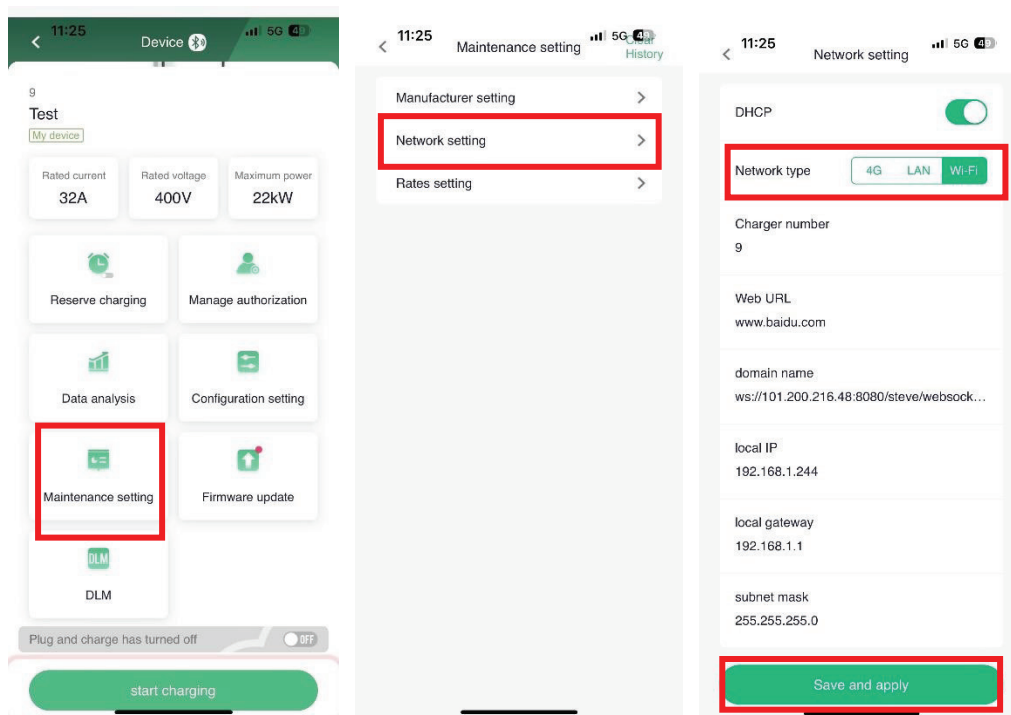

2. Connect to specific Wi-Fi

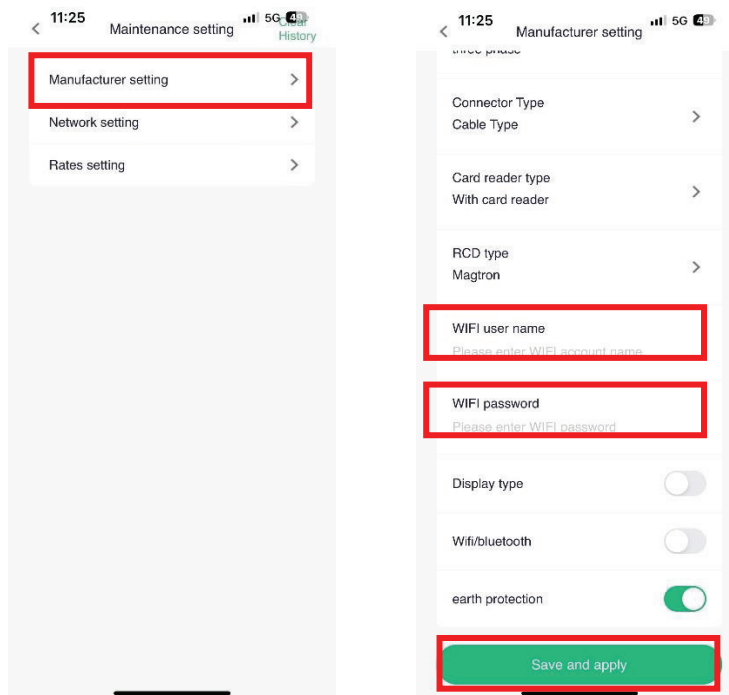


Type in the Wi-Fi's name and enter the password.

NOTE:

- The Wi-Fi's name can only be characters or numbers. Any other marks such as '/.'?'&*~# are not supported.
- The Wi-Fi's frequency should be 2.4GHz.

3. After the setting, please wait for 1-3 minutes and connect the charger to OCPP platforms.


- Enter the platform's URL address and the charger number accordingly. Wait for few seconds and check on the platform whether the charger is online or not.

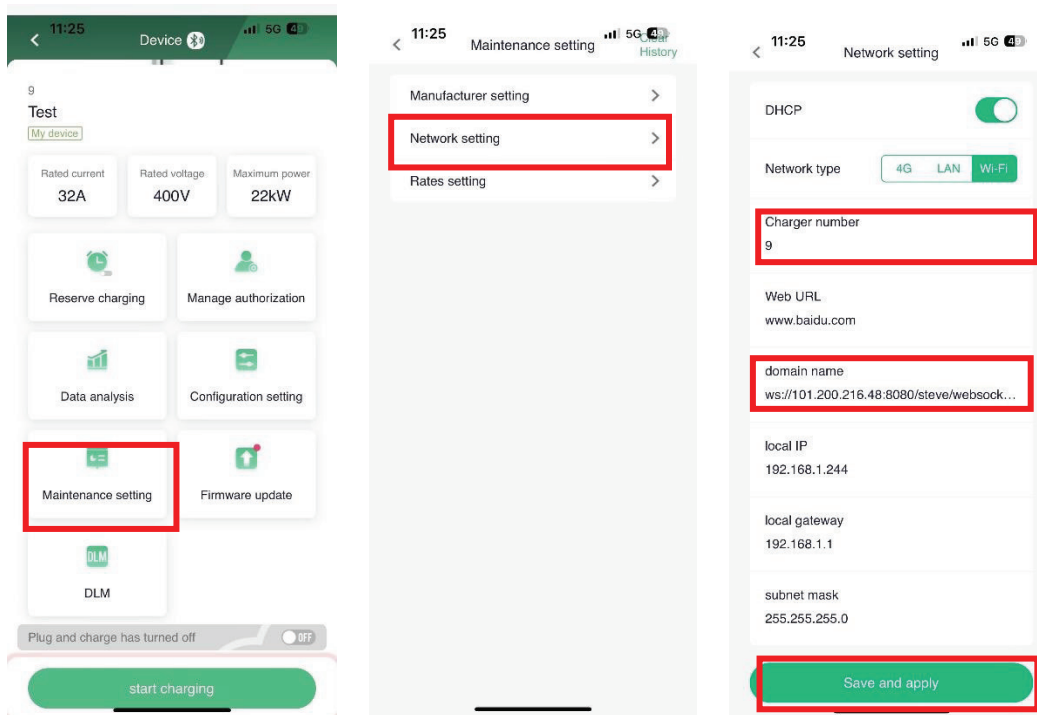


II Interstellar Wi-Fi Setting Guide

STEP 1 Check the firmware version




1. Scan the QR code on the nameplate with Sinexcel AC application to bind the charger.

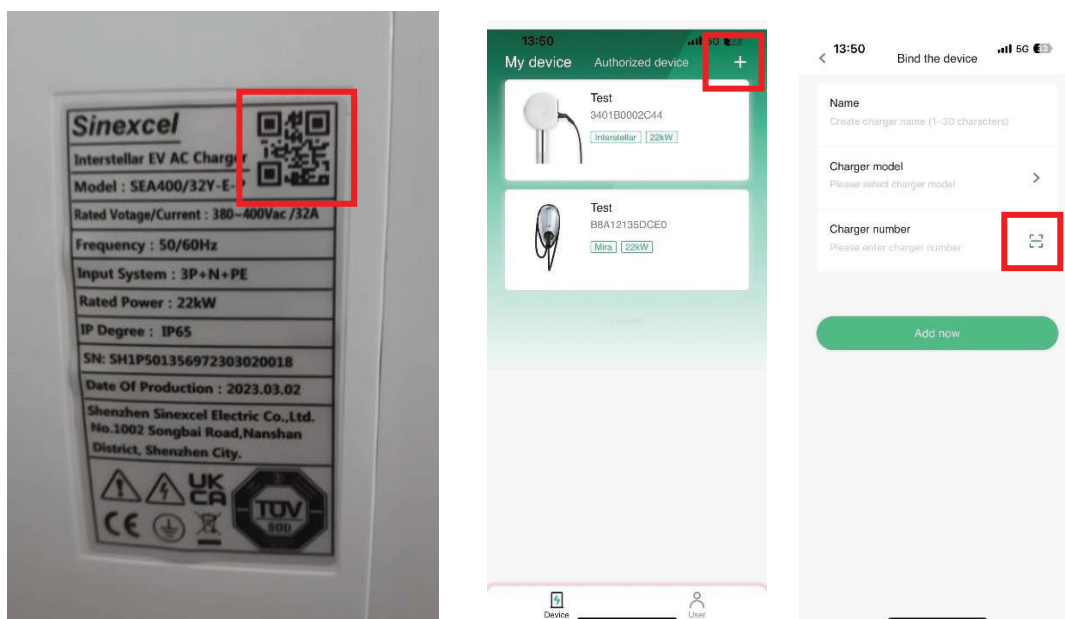

2. Check whether the firmware version is 000.061.050 or higher than that. (**Note: firmware version that is older than 050 does not support the Wi-Fi function.**)

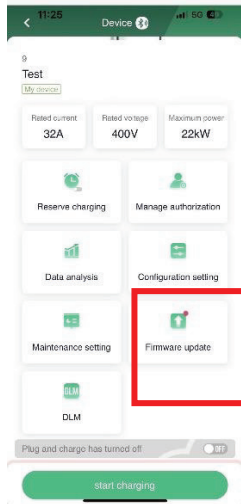


3. If the firmware version is 000.061.050 or newer version, please move to STEP 2;
If the firmware version is older than 000.061.050, (i.e. the number at the end is smaller than 50), we need to upgrade firmware version first.
4. Upgrade
 - 1) through Sinexcel AC application

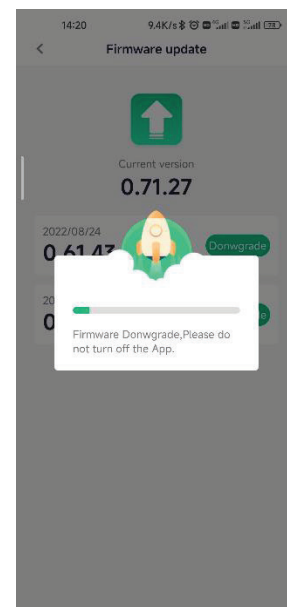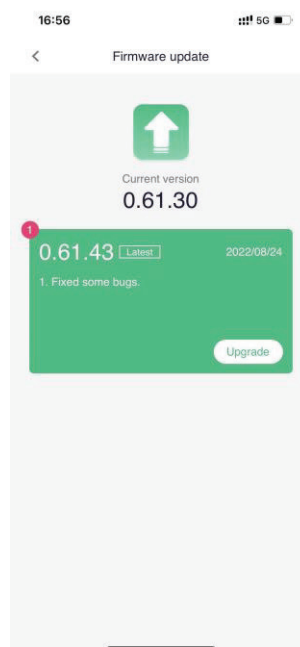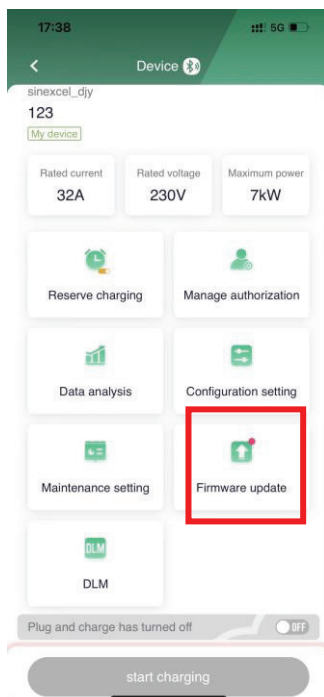


2) through USB disk

NOTE: USB2.0 drive with format FAT32. 4096 Bytes (Smaller than 16G) and USB name simplification (do not appear other than the letters of the alphabet A-Z, will not be recognized).

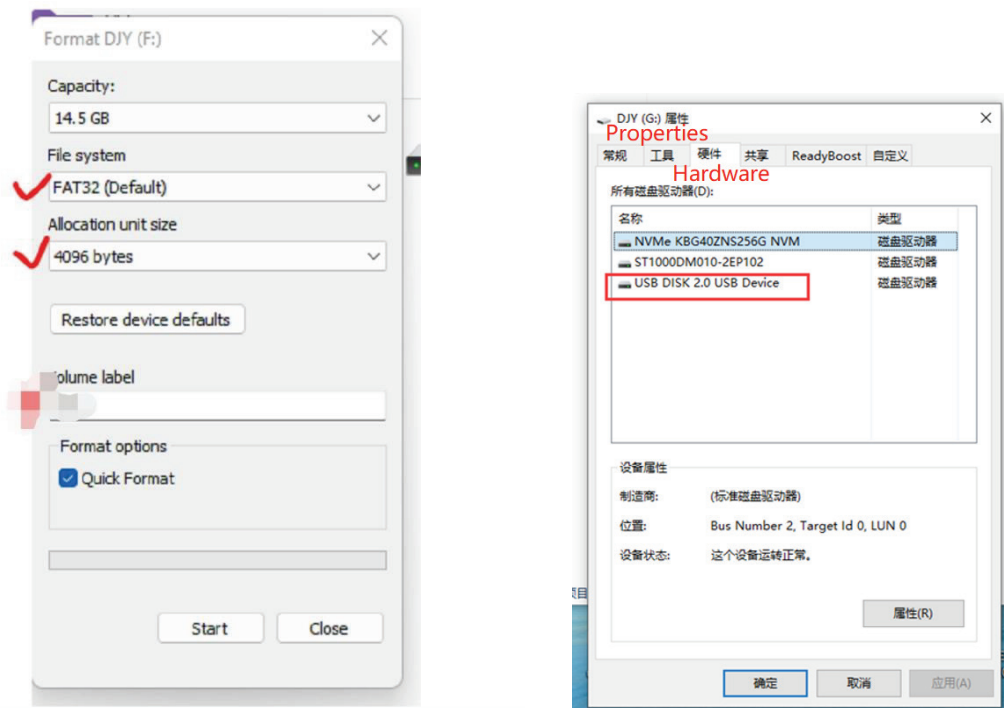


- Insert the USB drive with the latest firmware file (euac_GD.bin) at the root directory. Note the name of the firmware file should be exact: euac_GD.bin. Any difference would cause upgrade failure.
- Reset the charger by opening the breaker and reclosing it and wait for 1 minute till the LED light of Interstellar turns to constant blue. Plug out the USB disk. Upgrade finished.

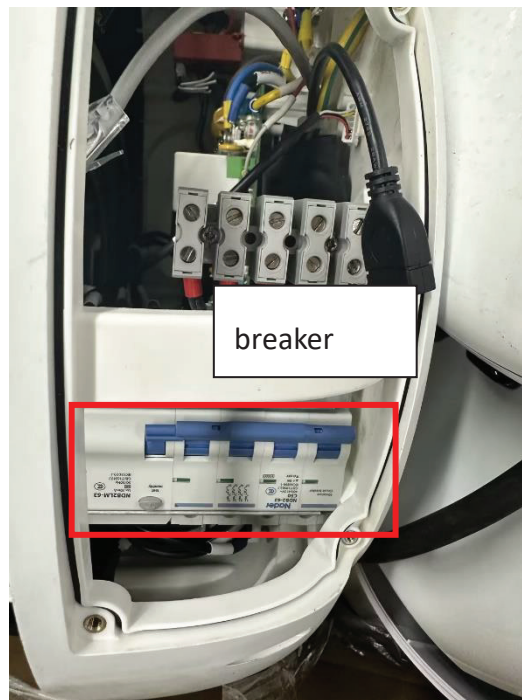



5. Check the firmware version through Sinexcel AC application after upgrade to see whether the upgrade is succeeded. If yes, move to STEP 2; if the upgrade failed, please check the USB disk's type, the firmware file's name, and whether the file is at the root directory of the USB disk.

STEP 2 Connect to Wi-Fi

1. Switch the communication method to Wi-Fi

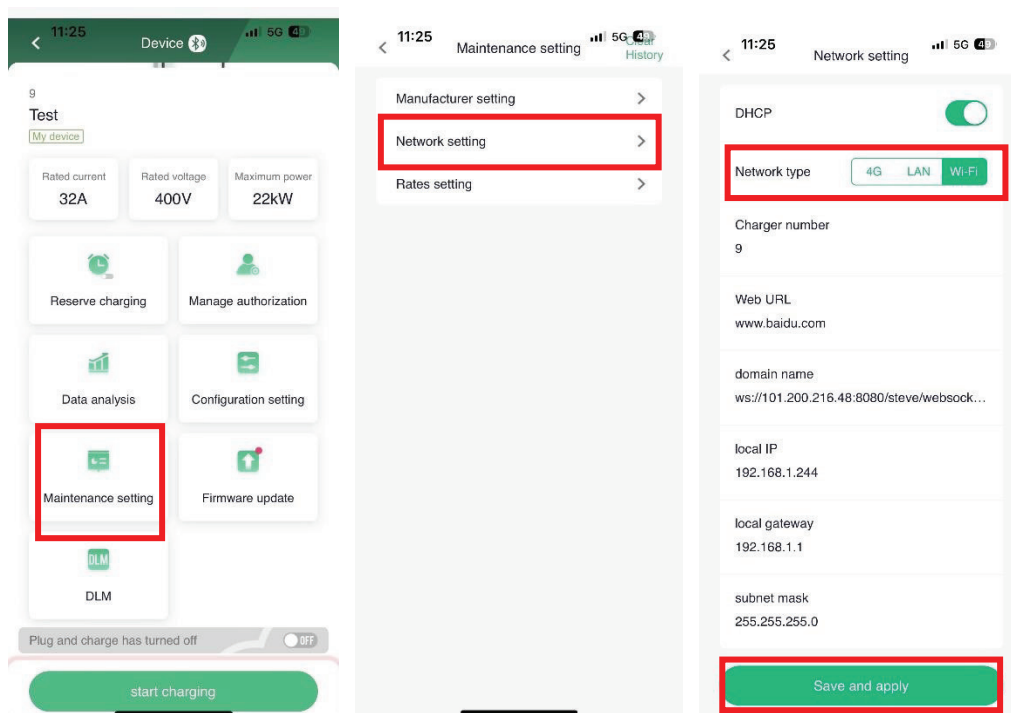

2. Connect to specific Wi-Fi

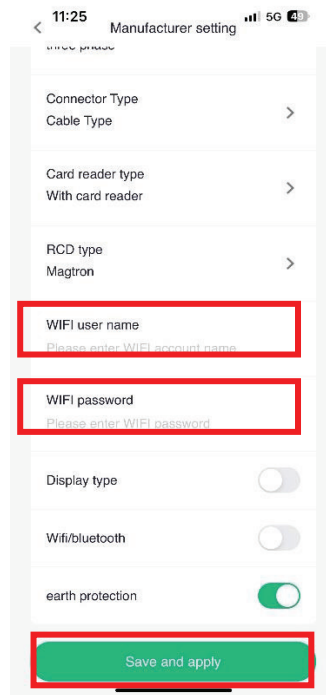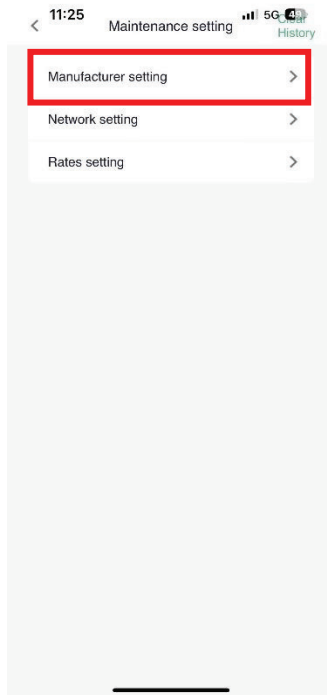

Type in the Wi-Fi's name and enter the password.

NOTE:

- The Wi-Fi's name can only be characters or numbers. Any other marks such as '/.'?'&*~# are not supported.
- The Wi-Fi's frequency should be 2.4GHz.

3. After the setting, please wait for 1-3 minutes and connect the charger to OCPP platforms.

- Enter the platform's URL address and the charger number accordingly. Wait for few seconds and check on the platform whether the charger is online or not.

